



INSTALLATION



QUICK RELEASE ATTACHMENT KIT 1635

FITS: '09-UP ELECTRA GLIDE STANDARDS, STREET GLIDES, ROAD GLIDES AND ROAD KINGS

PARTS INCLUDED

- 1 Left Mounting Bracket
- 1 Right Mounting Bracket
- 1 Hardware Kit
 - 2 Spacers (0.305" Long)
 - 2 Spacers (0.695" Long)
 - 2 Sleeves (15/32" OD x 0.695" Long)
 - 4 Black Nylon Bushings
 - 4 End Washers (13/16" OD x 3/8" ID)
 - 4 5/16" Flat Washers
 - 4 5/16-18 x 1 3/4" Cap Screws
 - 2 3/8" Flat Washers
 - 2 3/8-16 x 1 1/2" Cap Screws
 - 2 3/8"-16 Acorn Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Torx Wrenches, Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the saddlebags to expose the rear fender struts. Remove the 2 stock fender strut bolts (PIC 1)

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

-cont.-

STEP 3 Locate the left and right side mounting brackets. It may be helpful to test fit them to the motorcycle. The brackets will only fit one side. (PIC 2)

STEP 4 Starting with the right side, insert 2 of the 5/16-18 x 1 3/4" Cap Screws and 2 of the 5/16" flat washers into the bottom holes of the mounting bracket. (PIC 3)

STEP 5 Slide one of the longer (0.695") spacers on to the front bolt and one of the small (0.305") spacers on the rear bolt and install on the right side of the motorcycle. Tighten the hardware to 14 ft-lbs (23 Nm). (PIC 4)

STEP 6 Assemble two (2) Nylon Bushings on to one (1) of the metal sleeves. The bushings should push on to the sleeve with moderate force. (PIC 5)

STEP 7 Mount the bushing assembly from Step 6 to the top hole in the Mounting Bracket using two (2) End Washers and one (1) of the 3/8" Cap Screws. (PIC 6)


STEP 8 Use one (1) 3/8" flat washer and one (1) Acorn Nut on the backside of the mounting bracket to secure the bushing assembly.

STEP 9 Tighten all hardware and repeat all steps for the left side.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!


PIC. 1

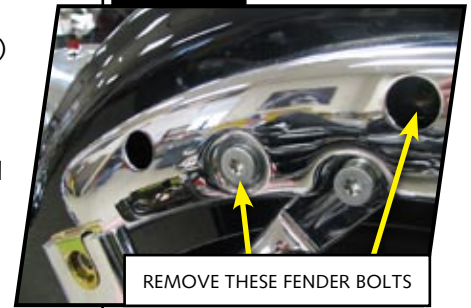


PIC. 2

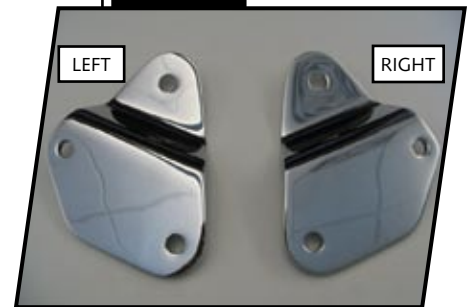


PIC. 3

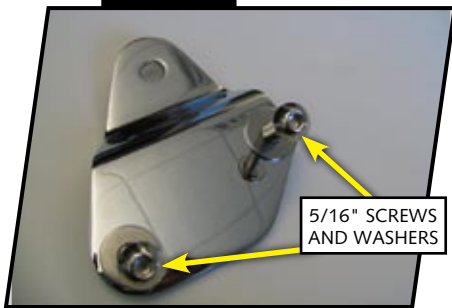

PIC. 4

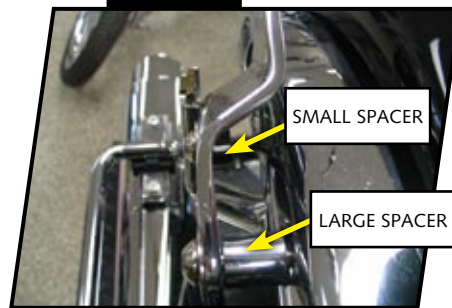

PIC. 5

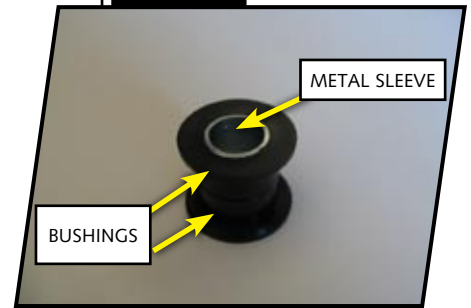

PIC. 6

