




LED FILLER PANEL LIGHTS ALL RED

PARTS INCLUDED

1	Right Side Light Assembly
1	Left Side Light Assembly
1	Hardware Kit Including:
12	1/4" Flat washers
4	1/4-20 x 3/4" Bolts
4	1/4-20 Locknuts
1	Dielectric grease packet
1	Run/Turn/Brake Splitter Harness
6	6" Cable ties

INSTALLATION INSTRUCTIONS

1. Park on a level surface and shut off the motorcycle. Ensure the engine has time to cool before installation.
2. Remove your saddlebags by turning the two fasteners inside counter-clockwise. Lay your bags on a soft surface, out of the way. Remove the seat and set it aside, out of the way.
3. Identify which Ciro Filler Panel Light goes to which side by looking at the back. They are marked L & R.
4. Locate the black lighting connector at the rear of the under-seat area. Disconnect this and plug the Ciro Run/Turn/Brake splitter harness in-line with it. Plug in the right and left LED filler panel lights to test and understand the functions. Brown wire should be right, violet should be left. Unplug the lights and set them aside. (FIG.1)

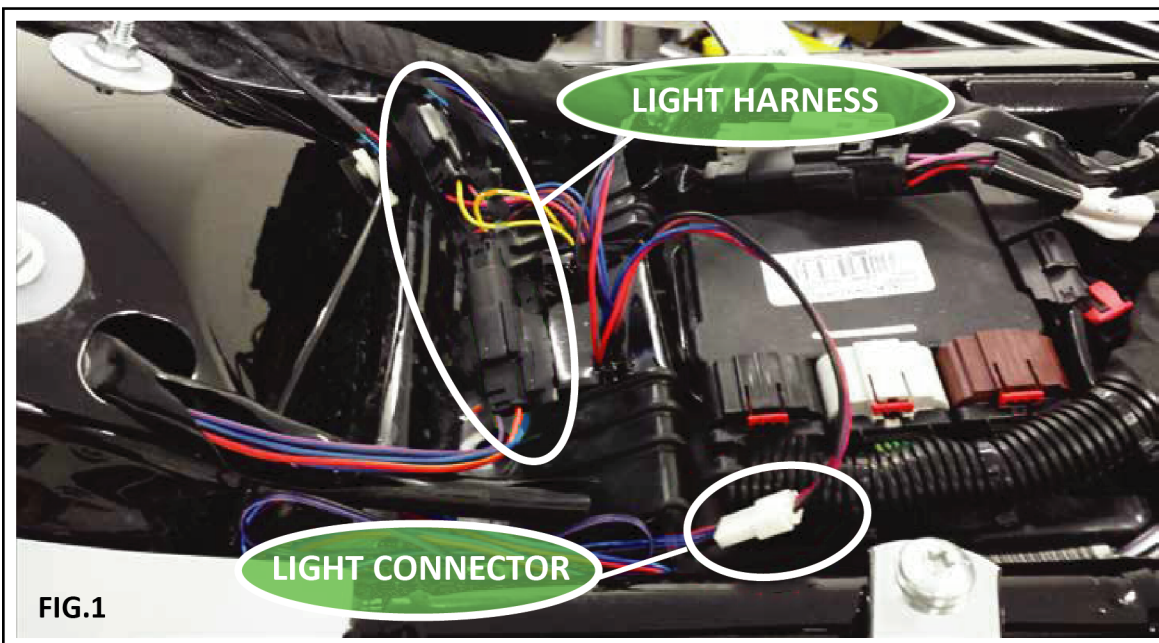

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro® warrants that products sold hereunder to the original purchaser, if maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of (3) years from date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.


Warranty will not be granted unless the part is properly installed and maintained.

Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.

Please visit our website Ciro3d.com for our complete warranty policy.



5. Choose a light assembly then insert the wire from the light through the large chrome oval opening in the saddlebag brace.
6. Place the light housing in the large opening with the tabs on the inside surface. Align the holes of the light housing with those of the oval.
7. Insert a 1/4-20 x 3/4" bolt and washer through the aligned holes from the outside. Fasten on the other side with a washer and 1/4-20 locknut. (FIG.2.) **Do not over-tighten**
8. Route the wire up along the top of the outer edge of the fender and secure it with cable ties. When you get to the air line, follow it to get the wire into the space under the seat. (FIG.2.)
9. Repeat on the other side.

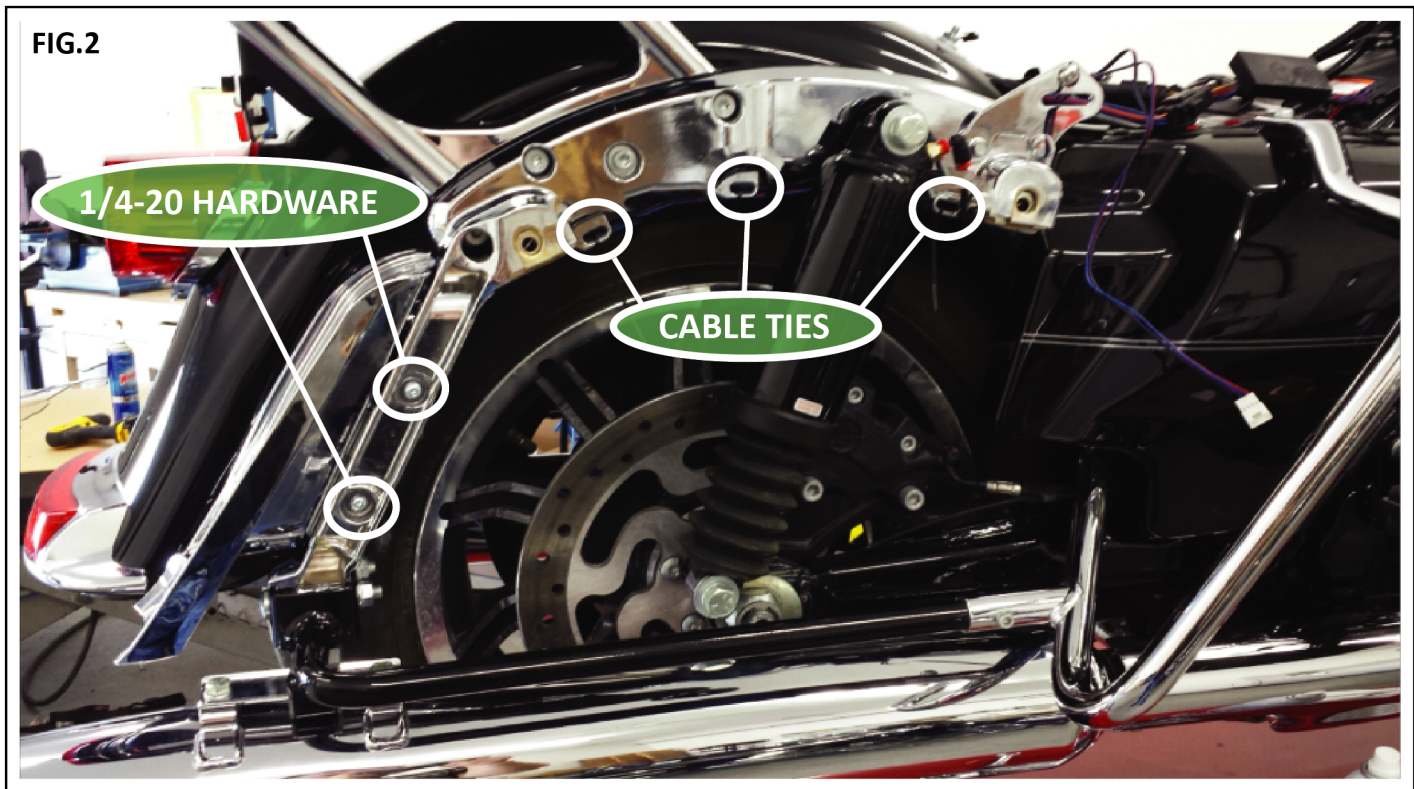

10. Plug the wires coming from the rear filler lights into the wires coming from the splitter harness. The brown wire should be on the right, and the violet wire on the left. (FIG.1.)
11. Turn the bike on to accessory power and verify that all lighting is functioning as expected.
12. Re-install your saddlebags and observe the angle at which the lights are sitting. If clearance is an issue anywhere, use the included extra washers to shim the lights at their mounting point.