



INSTALLATION

REAR FENDER FLARES for TRIKES

7214

PARTS INCLUDED

- 1 Fender Flare Right Side—Front Section
- 1 Fender Flare Right Side—Rear Section
- 1 Fender Flare Left Side—Front Section
- 1 Fender Flare Left Side—Rear Section
- 4 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED


Cleaning Supplies, Masking Tape, Non-Permanent Marker

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Thoroughly clean the left and right fenders sides with warm soapy water. Dry completely. Using the supplied alcohol pads, wipe the installation area to remove any residue. Let dry completely before starting installation. PIC 1

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

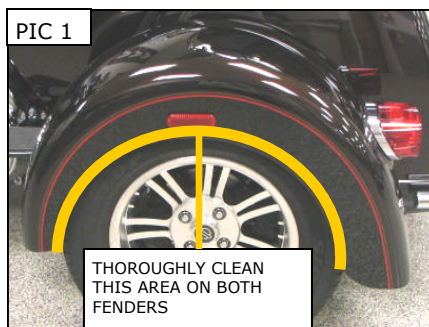

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com


-cont.-

7214-21HD-0112


STEP 3 Determine the left Front and Rear Fender Flares from the right. PIC 2

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Küryakyn recommends “mocking up” components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

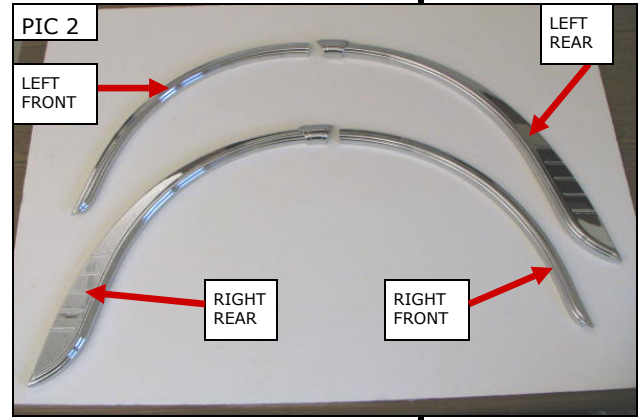


STEP 4 Starting on the left side, test fit the rear section of the Fender Flare to the rear portion of the wheel opening. The lip on the rear piece has a radius that will follow the bottom rear edge of the wheel opening allowing it to fit snug to the back edge of the opening. PIC 3 Make any reference marks on the fender with a non-permanent marker or masking tape.

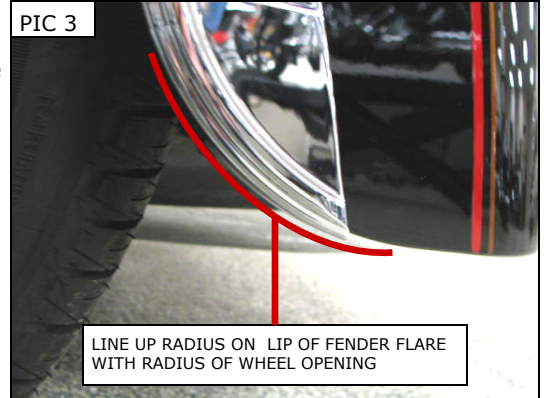

STEP 5 Rub the adhesive backing on the rear section of the Fender Flare with your finger nail to activate the adhesive. Remove the backing and, using the reference marks from Step 4, apply the Fender Flare to the rear of the wheel opening. Press firmly in place for one minute. Full bonding will occur in 24 hours.

STEP 6 Test fit the front section of the Fender Flare to the front edge of the wheel opening. Line up the front edge of the Fender Flare with the bottom edge of the wheel opening. PIC 3 There is a lip on the Fender Flare that will rest against the bottom edge of the wheel opening. PIC 4 There is an over-lap portion (PIC 4) on the rear section that will allow you to adjust the position of the front section to fit the opening and line up the bottom lip on the Fender Flare with the bottom edge of the wheel opening. PIC 5 Make any reference marks on the fender with a non-permanent marker or masking tape.

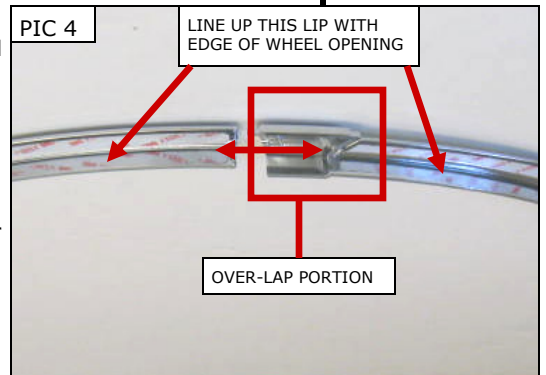

STEP 7 Rub the adhesive backing on the front section of the Fender Flare with your finger nail to activate the adhesive. Remove the backing and, using the reference marks from Step 6, apply the Fender Flare to the front of the wheel opening. Press firmly in place for one minute. Full bonding will occur in 24 hours.



STEP 8 Repeat Steps 4, 5, 6 and 7 for the right side.