



SUPER DELUXE WOLO BAD BOY AIR HORN KIT

7290

PARTS INCLUDED

- 1 Wolo Bad Boy Chrome Air Horn
- 1 Chrome Wolo Bad Boy Air Horn Cover
- 1 Horn Mounting Kit Containing:
 - 1 Wiring Harness
 - 6 4" Black Cable Ties
 - 1 Dielectric Grease Pack
- 1 Hardware Kit Containing:
 - 1 Horn Mount
 - 1 Band Clamp
 - 1 M8 X 1.25 X 30mm Socket Head Cap Screw
 - 1 M8 X 1.25 Nylock Nut
 - 1 Paint Protector Strip
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.



This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Flat Blade Screwdriver, Set of Combination Wrenches, Set of Metric Hex Wrenches, Torque Wrench (IN/LBS), Set of Sockets

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

NOTE: Suggested mounting locations are the left front down tube or engine guard (if equipped).

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




kuryakyn.com



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.


STEP 2 Disconnect the lead wires from the horn and remove the horn from the motorcycle.

STEP 3 Decide on a location for mounting the new Wolo Bad Boy horn, usually on the left (clutch) side down tube of the motorcycle. Test the chosen location by holding the mounting block and horn it and verifying clearances between the horn, mount and any component on the motorcycle. Wipe the area with the included alcohol pad. Test fit the paint protector strip to the desired mounting area. PIC 1 Cut the protector strip to length, remove the backing and attach it to the area.

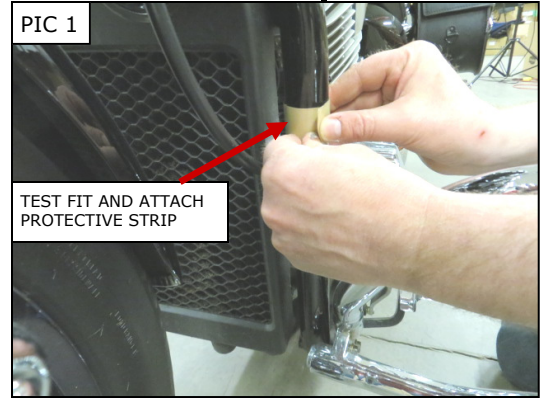


NOTICE It is the installer's responsibility to ensure that there is adequate clearance between the Super Deluxe Wolo Horn and any component on the motorcycle. Küryakyn is not responsible for any damage due to inadequate clearance.

STEP 4 Open the included band clamp all the way to release the end from the screw housing. Wrap the clamp around the frame. Thread the end of the clamp through the opening in the mount and back to the screw housing of the clamp typically as shown in PIC 3. Insert the end into the screw housing and **torque the clamp to 60 IN/LBS.**

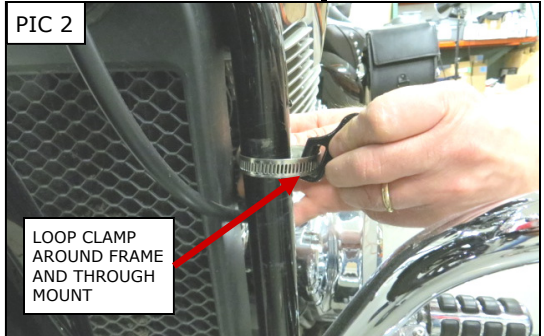

STEP 5 Using the included M8 X 1.25 X 30mm socket head cap screw and M8 nylock nut, attach the Wolo Bad Boy horn to the mount. Verify clearances between the horn, mount and any component on the motorcycle. Tighten securely.

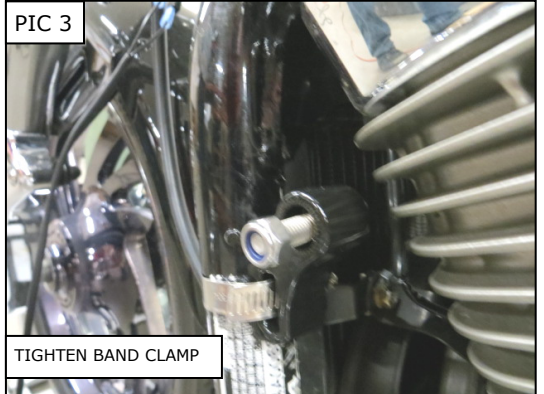

WARNING MAKE SURE THE NEW SUPER DELUXE WOLO HORN DOES NOT INTERFERE WITH ANY COMPONENT OR MOVEMENT OF ANY COMPONENT ON THE MOTORCYCLE. INTERFERENCE WITH COMPONENTS OR THEIR MOVEMENT MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.


STEP 6 Remove the seat or side cover to gain access to the battery. Connect the ring terminals on the new Horn Wiring Harness to the battery, red wire to positive and black wire to negative. PIC 2

STEP 7 Route the wires under the fuel tank, or down along the frame to the new horn.


NOTICE Secure all wiring from the newly installed and/or from existing parts, away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 8 Secure the wiring harness with the provided cable ties. Be certain the wires are away from any pinch points or direct heat.

STEP 9 Connect the **BLACK** wires with the male spades from the new Harness to the horn wires on the stock wiring harness.

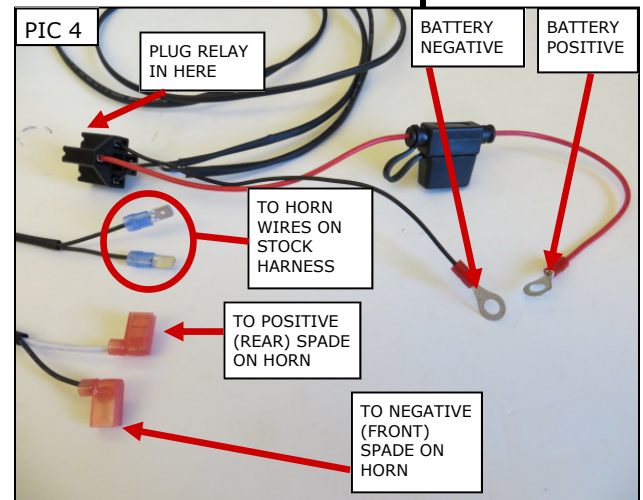

STEP 10 The **WHITE** wire with the female spade connects to the positive rear spade, marked with a (+), (PIC 5) on the Wolo Horn. The **BLACK** wire with the female spade connects to the front negative spade, marked with a (-), (PIC 5) on the Wolo Horn.

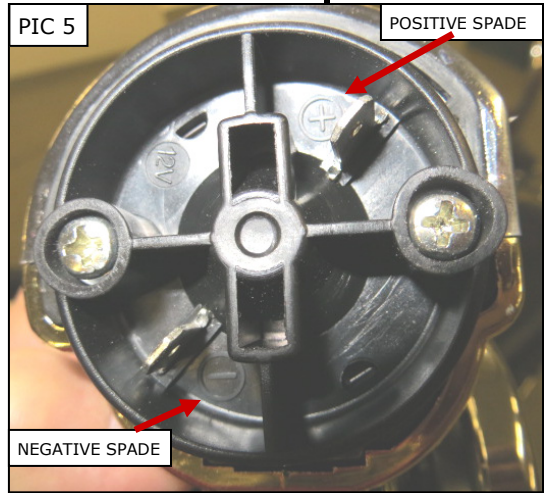

STEP 11 Under the seat, plug the horn relay on the new wiring harness to the relay connector located a few inches from the battery terminals. PIC 4


NOTE: Wrapping the joint between the relay and the relay plug with electrical tape will help keep water and debris out.

NOTICE Secure the relay in a location so the relay terminals up and it is protected from the elements (road grime, rain, or washing the bike).

STEP 12 With the relay in place, turn the key to check the horn function with the OEM handlebar mounted horn button. If you do not have horn function, review all connections.

STEP 13 Replace the seat or access panel over the battery.

WARNING AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

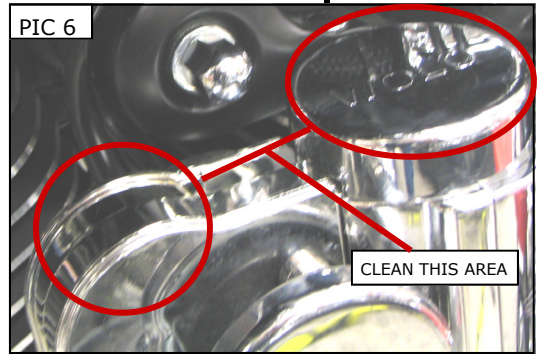

STEP 14 Tighten all fasteners.

STEP 15 Clean the top of the Wolo Bad Boy Horn with the included alcohol pad. Allow the area to dry completely. PIC 6

NOTICE Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

NOTICE The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 16 Test fit the Cover to the Wolo Bad Boy Horn. Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the backing. Press the Cover into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

WARNING IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT THERE IS ADEQUATE CLEARANCE BETWEEN THE WOLO HORN AND ANY COMPONENT ON THE MOTORCYCLE. IMPROPER CLEARANCE MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH. KÜRYAKYN IS NOT RESPONSIBLE FOR ANY DAMAGE OR INJURY DUE TO INADEQUATE CLEARANCE.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.